dCS Verdi Remote Control Guide

The blue LED flashes when a DAC or DDC command is sent

Standby

Selects Standby mode or normal operation. With white LED on, controls all dCS units.

SACD / CD

Selects format for playing hybrid discs

Transport controls

Play / Pause, Stop / Eject

Last track / Fast Forward and Next track / Fast Reverse.

With white LED on, Track buttons skip to Index.

Program / Clear

Program or clear a track sequence

Mode control

Sets the track playing mode

Input / Filter

Cycles through Input or Filter choices on DDC or DAC

0 - 9

Press the Keypad button or the 0 button or hold down any numbered button to light the white LED. Use the 0 - 9 buttons for programming or selecting track numbers while the white LED is on.

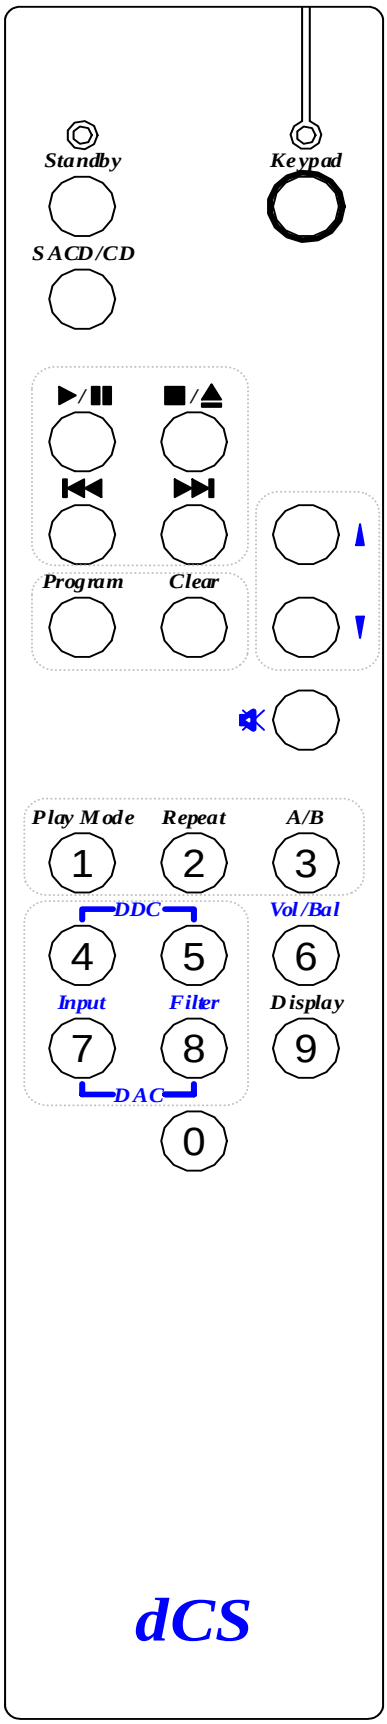

The white LED lights when the numeric keypad (buttons labelled 0 - 9) and some alternative functions are active.

Keypad

Press to set the 0 - 9 buttons to enter numeric keypad mode for 5 seconds. Press another button while the white LED is lit.

▲ ▼

Adjusts Volume & Balance (DAC)

Mute

Mute / unmute all analogue outputs (DAC)

Vol / Bal

Sets Volume or Balance adjustment (DAC)

Display

Sets the default display